


Quick Start Guide

Conference Rooms A/B/C

Tap **Splash Screen** to Start Room Functions


HOME SCREEN

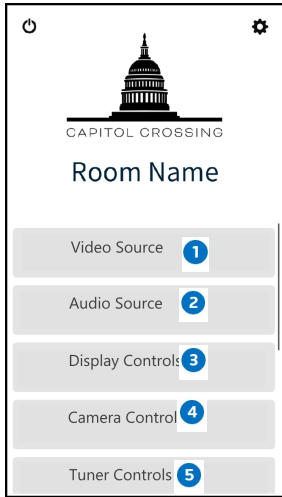

- 1 Select **Video Source** to send signal to Display for Presentation, Web Conferencing, or Cable TV
- 2 Select **Audio Source** to send Audio signal
- 3 Select **Display Controls** to manually turn Display on/off
- 4 Select for **Camera Controls**
- 5 Select **Tuner Controls** for TV Controls

Note: Available Sources for both Video and Audio will vary depending on Room Configuration. To combine or separate rooms, use the Master Control Panel located in the AV Rack.


PRESENTATION

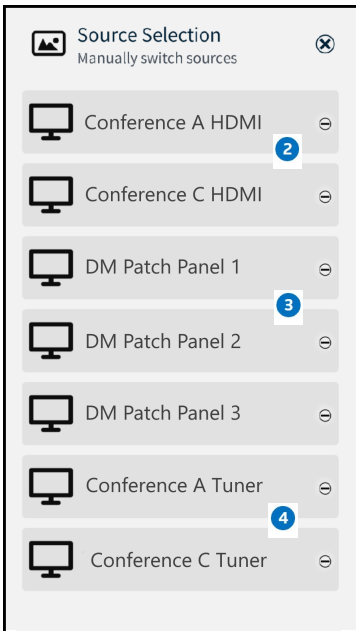

- 1 From the **Home Screen**, Select **Video Source**
- 2 To connect a Laptop, select **HDMI** and connect laptop using **HDMI Cable**.
- 3 To **Patch an Auxiliary Device**, select **DM Patch Panel**
- 4 For TV, select **Tuner**

CONNECT A LAPTOP TO A WALLPLATE

- 1 Decide what connection your laptop has for video:

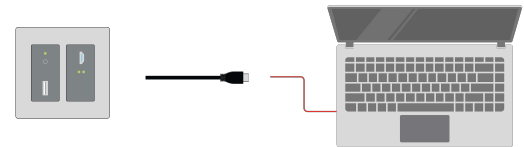

- 2 Choose the **Appropriate Cable** and plug into your laptop.
- 3 Plug cable into similar port on **Wall Plate**.



For Support




Call 1-888-454-6863, Option 2 or email support@cenero.com

For specific questions regarding service plans, contact your Managed Service Specialist.




WEB CONFERENCING

 - 1 From the Home Screen, select **Video Source**.
- 2 Select **HDMI** as the source.
- 3 From the Home Screen, Select Audio Source.
- 4 Select HDMI as the Source.
- 5 Connect both the USB and HDMI cables to your laptop.
- 6 From your laptop, open the invitation or web conferencing software and **join the meeting**. When prompted, or in the settings, select the Room options for the Speaker, Microphone, and Camera.
- 7 From Home Screen, Select Camera Controls and follow instructions below.
- 8 Use Laptop to control Audio Volume levels and Mute/Unmute.

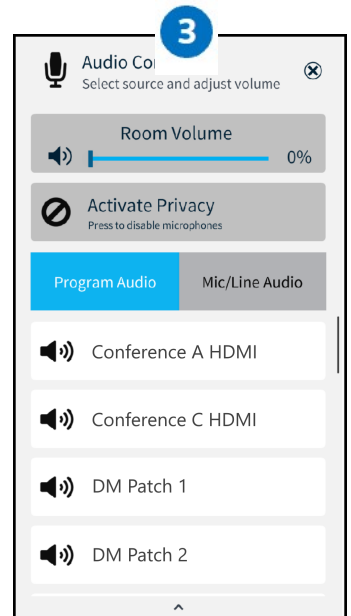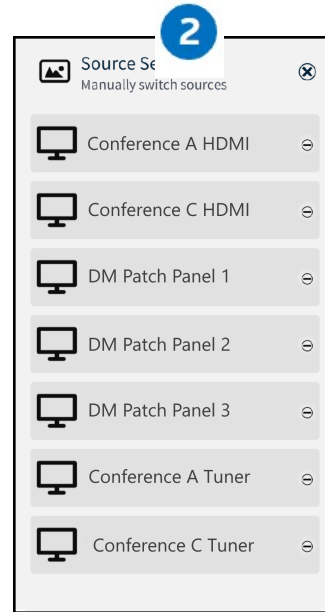

CAMERA CONTROLS

- 1 From **Home Screen**, select Camera Controls.
- 2 Select for Camera Selection.
- 3 Use the +/- buttons to **zoom in/out**. Use the ^ buttons to **pan/tilt**.
- 4 Select a **camera preset position**. To save a new camera position as a preset, press and hold a preset number.
- 5 Select the **X** to **return to the Home Screen**.

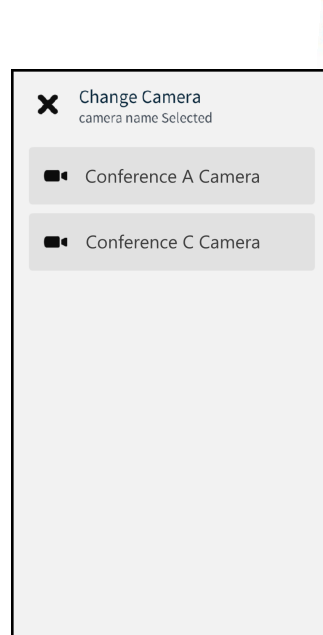


For Support
Call 1-888-454-6863, Option 2 or email support@cenero.com
For specific questions regarding service plans, contact your Managed Service Specialist.





DISPLAY CONTROLS

From the **Home Screen**, Select **Display Controls** to power on and off individual displays or to change display source.

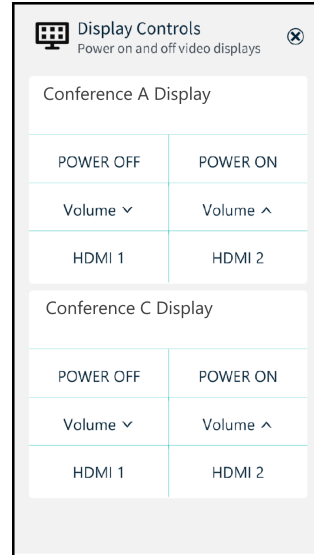

TUNER CONTROLS

From the **Home Screen**, Select **Tuner Controls** to control TV.

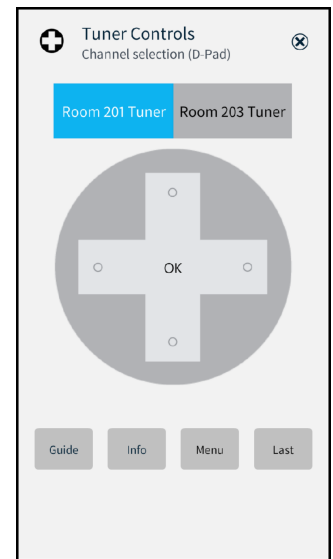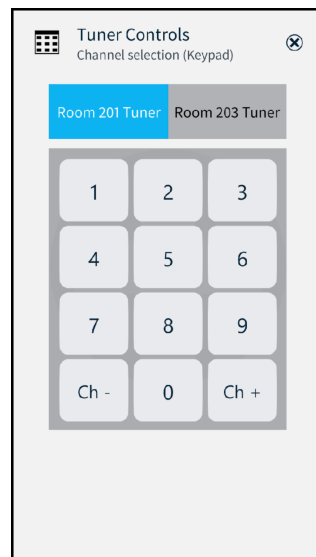

For Support

Call 1-888-454-6863, Option 2 or email support@cenero.com

For specific questions regarding service plans, contact your Managed Service Specialist.

